

INSTALLATION

1. Remove your seats:
 - 1.1. Lift the seat cushion & unplug all wiring connectors inside base.
 - 1.2. Remove the connectors from the mounting bracket.
 - 1.3. Remove the eight floor fixing nuts. Keep these for later.
 - 1.4. Lift the seat off, and move it to the back of the vehicle.
2. Modify the original floor bolts:
 - 2.1. Remove the four front floor studs from the van.
 - 2.2. Grind or cut off the unthreaded top part of each.
 - 2.3. Check the threads are undamaged and replace them in the floor.
3. Relocate electrical connections under the floor mat:
 - 3.1. Reconnect the male & female wiring plugs.
 - 3.2. Raise a little of the floor covering beneath the seat.
 - 3.3. Slide the plugs underneath, into the hollow by the handbrake.
 - 3.4. Check this will not hinder movement of the swivels central bolt in its slot.
 - 3.5. Reinstate floor covering and secure the wiring flap with Duck tape.
 - 3.6. Check that all rear lights and wiring are working correctly.
4. Fit the swivel:
 - 4.1. Place it onto the studs (Label to the front), secure with the 8 saved nuts.
 - 4.2. Note: It is necessary to rotate the top plate to access some of the studs.
 - 4.3. Secure the top plate with the label to the front and
5. Reinstall the seat:
 - 5.1. Using the supplied nuts
 - 5.2. Check that the lights and wiring are still working correctly.

Volkswagen T5 / T6 (UK Right Hand Drive) Passengers Double Seat Swivel Fitting Guide


OPERATING THE SWIVEL

Rotating the Seat to Face the Rear:

1. Unscrew the four locking bolts and secure them in the raised position (Pull up and twist like a light bulb).
2. Position yourself behind the seat & grasp it on each side, at or below cushion level.
3. Push it forward and towards the steering wheel.
4. Keep pushing with your right hand so the seat starts to rotate anti-clockwise.
5. Rotate the seat anti-clockwise until it is facing to the rear.
6. Adjust its position and secure with the two locking screws at the front of the seat.

Rotating the Seat to Face the Front:

1. Repeat the above but rotate the seat in the clockwise direction.
2. Secure the seat with the four locking screws.
3. Remember to engage all of them before tightening them down.

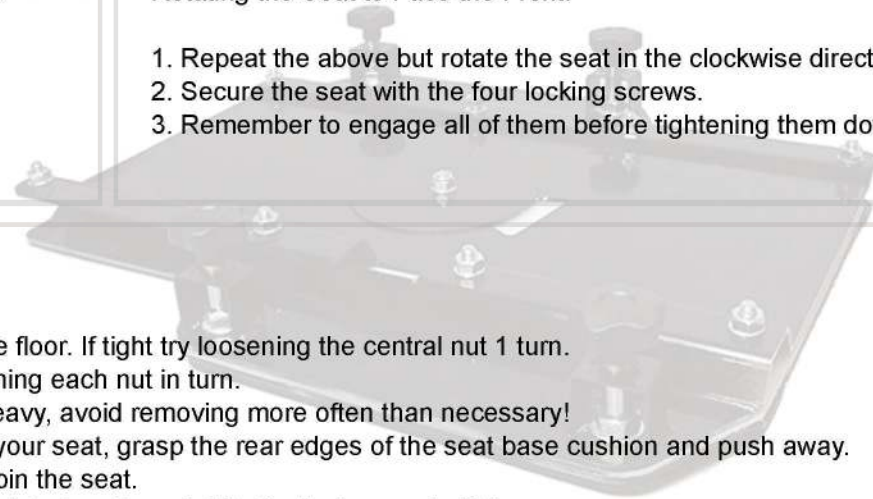

TIPS

- A. While installing: Check that it can rotate freely before securing down to the floor. If tight try loosening the central nut 1 turn.
- B. When securing the floor fixings: Avoid warping the steel by partially tightening each nut in turn.
- C. Before refitting the seat: Check the swivel can rotate freely - the seat is heavy, avoid removing more often than necessary!
- D. To spin the seat: Open the front passenger door & sit on the floor behind your seat, grasp the rear edges of the seat base cushion and push away. Keep your right hand on the cushion and keep pushing, this will start to spin the seat.
- E. Re-engage the locking bolts: The trick is to engage one at a time before tightening, there is bit of wriggle room built-in.
- F. Maintenance: A light spray of silicon lubricant on the white sheet, periodically, will help the seat spin around smoothly.
- G. Be safe. Always put the van in gear before rotating the seat, just in case you inadvertently release the handbrake.