


Installation diagram for
CBTO13RD2
PASSENGER

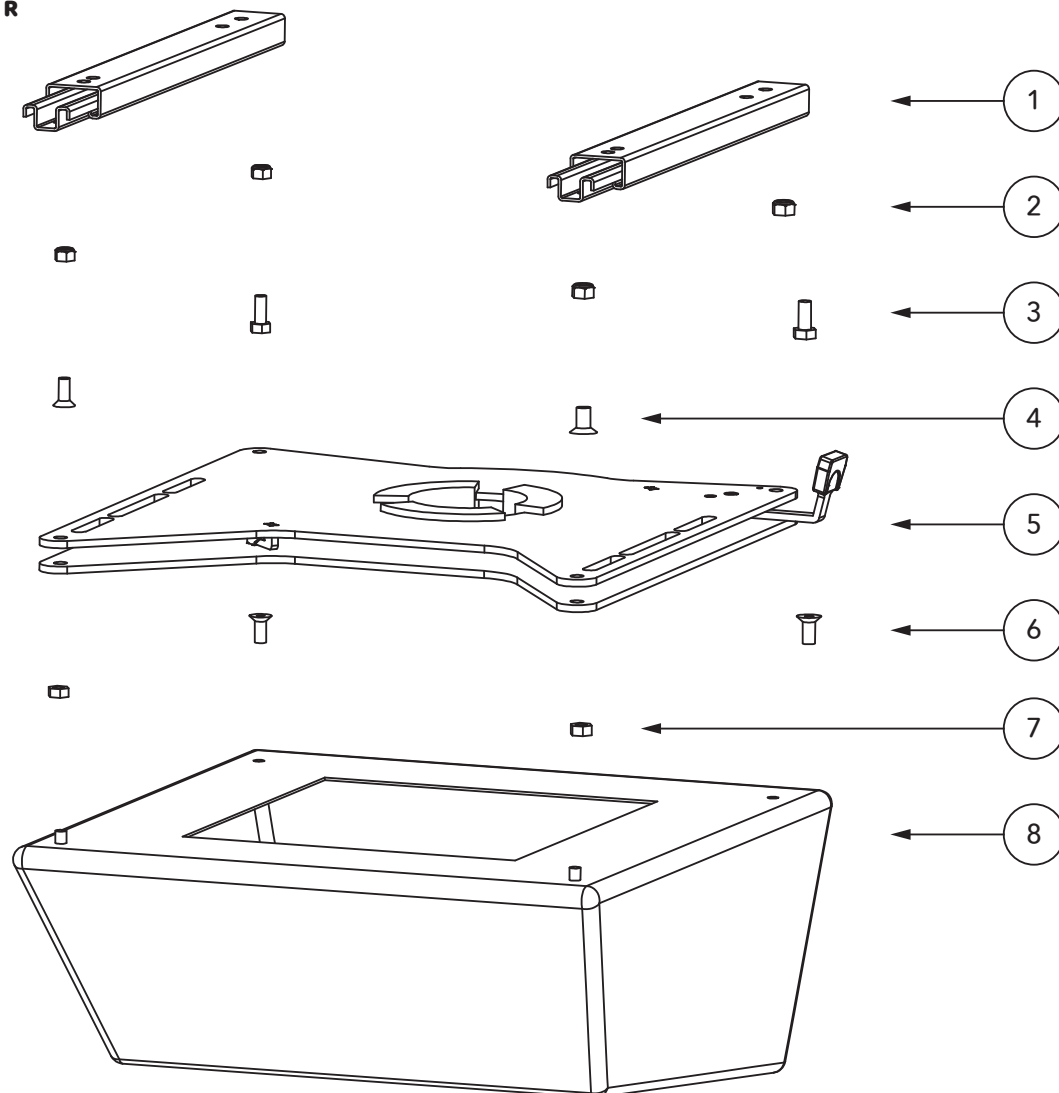

- | | |
|---|-----------------------------------|
| 1 | Original VW T5 sliders |
| 2 | 4 Nylstop nuts M8 |
| 3 | 2 Original VW T5 bolts M8x20 |
| 4 | 2 Countersunk hexagon bolts M8x20 |
| 5 | Swivel base CBTO13RD2 |
| 6 | 2 Countersunk hexagon bolts M8x20 |
| 7 | 2 Original VW T5 nuts M8 |
| 8 | Original VW T5 seat base |

ON THE VW T5 SEAT :

- Cut the bottom of the 2 side covers